


18265HS

USER GUIDE

Customer Careline 08457 573479

Instructions

- 1) Connect your AV equipment to the Scart Switching Box as shown in the diagram.
- 2) To view any of the AV devices through your TV, first push and release any previously selected buttons then simply press the selector button (A,B, or C) which corresponds to the socket to which your device is connected. Once a button is pressed the button will remain depressed (in the **IN** position) until pressed again and released.
- 3) When a device is not in use, the selector button for that Scart socket should be pressed and released to return the button to the **OUT** position.
- 4) Stereo audio output from a selected device can be sent to a Hi-Fi or Home Cinema system if the system is connected to the 2 phono sockets.

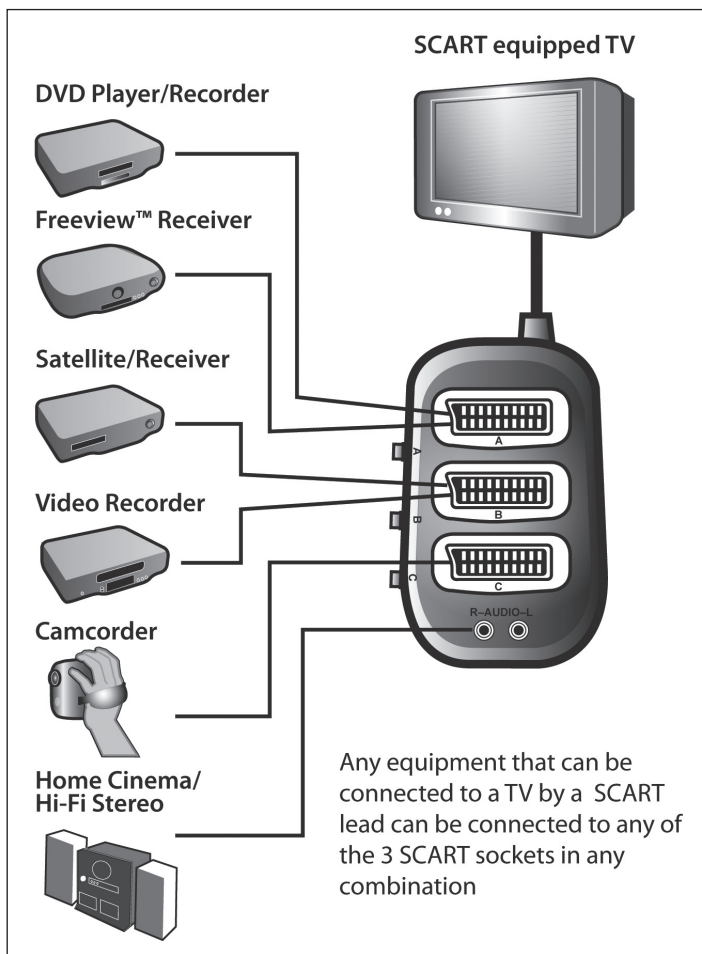

CUSTOMER CARELINE: 08457 573 479

Local Rate - UK Only

TECHNICAL SUPPORT: www.philex.com/support



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

